

Libre Solar BMS C1

User Manual

Martin Jäger

2024-04-06



LIBRESOLAR

Contents

1	Introduction	4
1.1	Project background	4
1.2	Disclaimer	4
1.3	License	5
2	Safety Instructions	6
3	Features	7
3.1	System overview	7
3.2	Hardware	8
3.2.1	Board design	8
3.2.2	MCU: ESP32-C3	9
3.2.3	BMS IC: BQ76952	9
3.2.4	Balancing	9
3.2.5	Protective switches	10
3.2.6	Current measurement	10
3.2.7	Cell and thermistor connectors	10
3.2.8	Power connectors	10
3.3	Communication interfaces	11
3.4	Firmware	11
4	Installation	13
4.1	Mechanical Design	13
4.2	Connections	13
4.2.1	Power connections	14
4.2.2	Signal connections	15
4.2.3	Connection order	15
4.3	Communication ports	15
5	Operation	16
5.1	Firmware flashing	16
5.2	Start-up	16
5.3	LED indications	16
5.4	Communication Setup	17
5.4.1	USB Serial	17
5.4.2	UART Serial	18
5.4.3	BLE	18

5.5	Configuration	18
5.5.1	Read measurements and battery status	18
5.5.2	Configure battery type	18
5.5.3	Adjust thresholds	19
6	Datasheet	20

1 Introduction

The Libre Solar BMS C1 is a flexible Open Source Battery Management System (BMS) suitable for various applications.

This manual describes the usage and most important functions of the BMS. Please visit learn.libre.solar for general information about battery management systems, charge controllers and other devices for DC energy systems.

Read this manual carefully and make sure you understand everything before starting with installation of the BMS.

Same as the hardware and firmware of the BMS, also this manual is Open Source. If you find any errors or have suggestions for improvement, please contribute to [the repository on GitHub](#).

1.1 Project background

The main target of the project behind this BMS is to provide a solid technical basis for custom developments of organizations working in the energy access sector.

The project is funded by the [EnAccess Foundation](#).



The development is driven by the Libre Solar and EnAccess Communities. Visit the following websites for most recent updates:

- EnAccess Community: community.enaccess.org
- Libre Solar Community: talk.libre.solar

Hardware and firmware source files are published on GitHub:

- Hardware Repository: github.com/LibreSolar/bms-c1
- Firmware Repository: github.com/LibreSolar/bms-firmware

1.2 Disclaimer

This user manual has been written and checked with care and to the best of our knowledge.

Libre Solar assumes no liability for the accuracy, completeness or quality of the information provided. Liability claims against the team for material, physical or immaterial damages caused by the use or non-use of the information provided or by the use of incorrect and/or incomplete information are excluded.

All information and instructions are non-binding. Libre Solar reserves the right to change, supplement or delete parts of the pages or the entire document without prior notice.

1.3 License

This user manual document is licensed under the Creative Commons Attribution-ShareAlike 4.0 International (CC BY-SA 4.0) License.



The full license text is available at <https://creativecommons.org/licenses/by-sa/4.0/>.

2 Safety Instructions

- The BMS shall only be used for the intended application.
- The maximum voltage and current of the connected batteries or loads must not exceed the limits of the BMS.
- Ensure that the BMS is configured correctly for the used battery type.
- Install the device considering general best practices for electrical and mechanical installations in accordance to laws in your country.
- An additional fuse must be installed as close to the battery positive terminal as possible.
- As sparks can occur during connection of the battery wires, don't install the BMS close to any flammable materials.
- The wire cross-section has to be large enough to handle at least the maximum specified current of the BMS.
- Use insulated tools only.
- Fix the wires outside the BMS to provide a strain relief and reduce forces on the terminals.
- Mount the device on a solid, non-inflammable material only. Depending on the ambient conditions and the average current, a heat sink may be required.

3 Features

3.1 System overview

The BMS is the heart of every Li-ion battery. It is needed to equalize series connected cells and protect the battery from current, voltages and temperatures outside the allowed operating range.

Below figure shows a complete battery system with the integrated BMS.

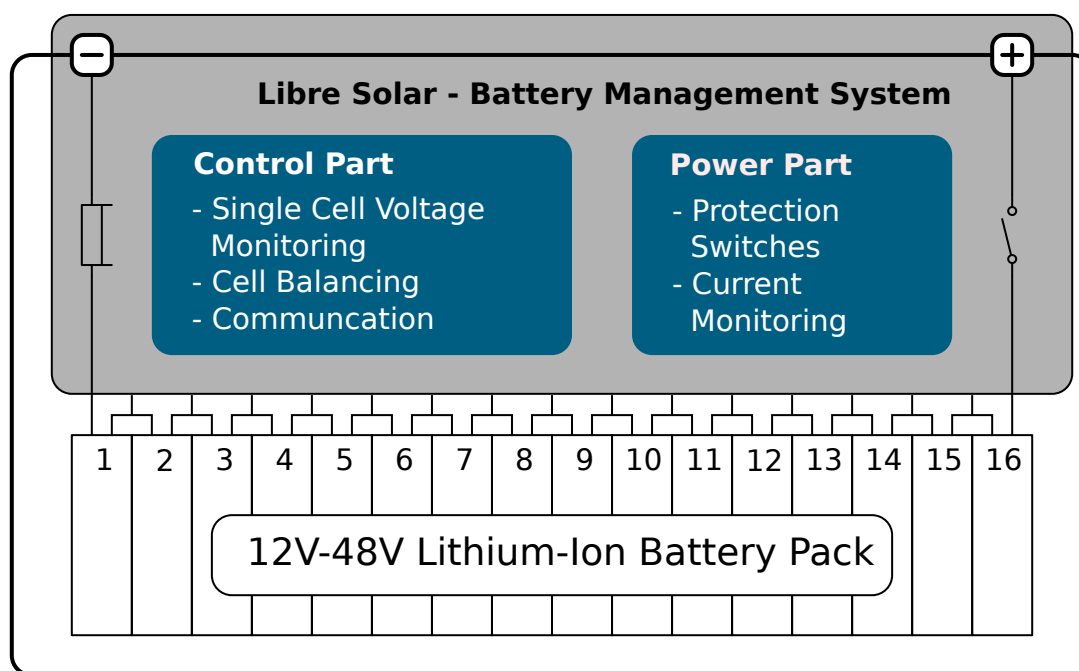


Figure 1: Overview of the BMS integrated into a Li-ion battery pack.

This BMS has the following high-level features:

- Flexible and fully Open Source design
- Suitable for 12V, 24V or 48V systems (up to 16 LFP cells in series)
- Continuous currents of up to 100A

With above specifications it is suitable for the following applications:

- Productive use appliances like milling machines
- Energy storage for AC mini-grid applications with up to 4 kVA inverters
- Second-life batteries built e.g. from recycled EV batteries
- Generic off-grid energy storage e.g. in caravans

3.2 Hardware

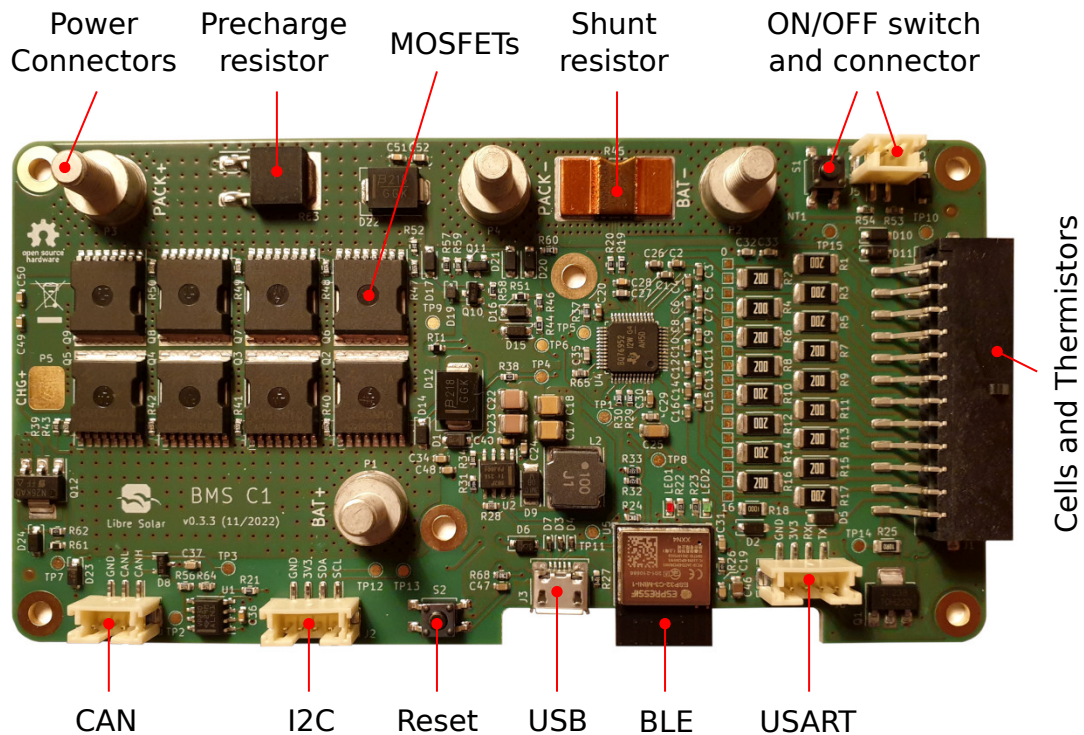


Figure 2: BMS Overview

3.2.1 Board design

All electronics components (power and control) are integrated into a single PCB in order to reduce cost and size.

The board contains the following main subsystems:

- Power part (top left)
 - High current terminals
 - MOSFETs (4 in parallel, 2 in series for bi-directional switching)
 - Current measurement shunt
- Control part (bottom right)
 - Microcontroller: ESP32-C3
 - BMS ASIC: Texas Instruments BQ76952
 - Internal power supply
 - Communication interfaces (CAN, UART, I2C, USB, Bluetooth)

3.2.2 MCU: ESP32-C3

The [Espressif ESP32-C3](#) is a single-core microcontroller featuring Wi-Fi, Bluetooth 5 (LE) and CAN (called TWAI by Espressif). It is based on the open-source RISC-V architecture.

3.2.3 BMS IC: BQ76952

The [Texas Instruments BQ76952](#) was selected as the BMS IC as it offers a good compromise between accuracy, features and cost.

Features according to Datasheet:

- Battery monitoring capability for 3-series to 16-series cells
- Integrated charge pump for high-side NFET protection with optional autonomous recovery
- Extensive protection suite including voltage, temperature, current, and internal diagnostics
- Two independent ADCs
- Support for simultaneous current and voltage sampling
- High-accuracy coulomb counter with input offset error < 1 μ V (typical)
- High accuracy cell voltage measurement < 10 mV (typical)
- Wide-range current applications (\pm 200-mV measurement range across sense resistor)
- Integrated secondary chemical fuse drive protection
- Autonomous or host-controlled cell balancing
- Multiple power modes (typical battery pack operating range conditions)
- NORMAL mode: 286 μ A
- Multiple SLEEP mode options: 24 μ A to 41 μ A
- Multiple DEEPSLEEP mode options: 9 μ A to 10 μ A
- SHUTDOWN mode: 1 μ A
- High-voltage tolerance of 85 V on cell connect and select additional pins
- Tolerant of random cell attach sequence on production line
- Support for temperature sensing using internal sensor and up to nine external thermistors
- Integrated one-time-programmable (OTP) memory programmable by customers on production line
- Communication options include 400-kHz I2C, SPI, and HDQ one-wire interface
- Dual-programmable LDOs for external system usage
- 48-pin TQFP package (PFB)

3.2.4 Balancing

The BMS features passive balancing with up to 100 mA.

3.2.5 Protective switches

The positive battery terminal can be disconnected by the BMS for safety reasons or upon demand of the user via a communication interface.

The disconnect switches are N-channel MOSFETs in a back-to-back configuration to be able to interrupt current in both directions (see also BQ76952 datasheet). In order to allow the high currents, 4 MOSFETs are connected in parallel.

The bottom side of the PCB can be attached to a heat sink to dissipate the heat at high continuous currents.

The cell connector has a pin to trigger a fuse at the pack positive terminal as a secondary protection if the MOSFETs fail short.

3.2.6 Current measurement

The current is measured using a shunt, located in the negative voltage path of the battery pack. The shunt voltage is amplified by the BQ76952 ASIC and read by the MCU.

Time-critical safety features like overcurrent and short circuit protection are implemented directly in the ASIC and can be calibrated via firmware.

3.2.7 Cell and thermistor connectors

The cells and thermistors are connected to the BMS using [Molex Micro-Fit](#) or [Würth WR-MPC3](#) series connectors.

Both series are pin-compatible and there are even more compatible connectors in the market for this popular series. The connectors can handle up to 5A, which is sufficient even for active balancing.

3.2.8 Power connectors

The BMS is designed for up to 100A continuous current, depending on ambient temperatures, heat sink and actually fitted MOSFETs.

Würth high-power solder terminals with M5 threads are used for wire-to-board connections.

3.3 Communication interfaces

One major advantage of an Open Source design is its extensibility and adaptation to specific requirements.

In order to provide the hardware interfaces required to add custom extensions, two options are offered. Communication between multiple BMSs or other devices like charge controllers can be achieved via CAN bus, while the additional interfaces like I2C and UART can be used for extension of the board with internal features like displays.

The MCU features built-in WiFi and Bluetooth communication.

The serial and Bluetooth communication interfaces use the [ThingSet protocol](#) by default, which allows to read measurement values from the BMS as well as store custom configuration.

3.4 Firmware

The firmware is based on [Zephyr RTOS](#) and thus allows for easy integration of additional communication features. The latest Zephyr long-term support release is in the process of being certified for functional safety according to IEC 61508.

Amongst all features inherited from underlying Zephyr, the BMS firmware has the additional BMS-specific features:

- Monitoring and configuration using the [ThingSet](#) protocol (mapping to MQTT, CoAP and HTTP possible)
 - Serial interface
 - CAN bus
 - I2C
 - Bluetooth
 - WiFi
- SOC estimation based on coulomb counting
- Configuration options
 - Pack layout
 - * Cell chemistry (LiFePO4, NMC, NCA)
 - * Nominal capacity
 - * Number of cells
 - * Thermistor type
 - * Shunt resistor

- * Custom open circuit voltage (OCV) look-up table
- Protection
 - * Discharge short circuit limit (A)
 - * Discharge short circuit delay (us)
 - * Discharge over-current limit (A)
 - * Discharge over-current delay (ms)
 - * Charge over-current limit (A)
 - * Charge over-current delay (ms)
 - * Cell target charge voltage (V)
 - * Cell discharge voltage limit (V)
 - * Cell over-voltage limit (V)
 - * Cell over-voltage error reset threshold (V)
 - * Cell over-voltage delay (ms)
 - * Cell under-voltage limit (V)
 - * Cell under-voltage error reset threshold (V)
 - * Cell under-voltage delay (ms)
 - * Discharge over-temperature (DOT) limit (°C)
 - * Discharge under-temperature (DUT) limit (°C)
 - * Charge over-temperature (COT) limit (°C)
 - * Charge under-temperature (CUT) limit (°C)
 - * Temperature limit hysteresis (°C)
- Balancing
 - * Enable automatic balancing.
 - * Balancing cell voltage target difference (V)
 - * Minimum cell voltage to start balancing (V)
 - * Current threshold to be considered idle (A)
 - * Minimum idle duration before balancing (s)

4 Installation

Attention: The maximum operating voltage of the BMS is 60V. The 16s configuration is only feasible for LFP cells. For NMC cells, a maximum number of 14 cells may be used.

4.1 Mechanical Design

The board dimensions are 70x135 mm² so that it can be easily integrated into existing housings with typical 18650 or 2170 cells.

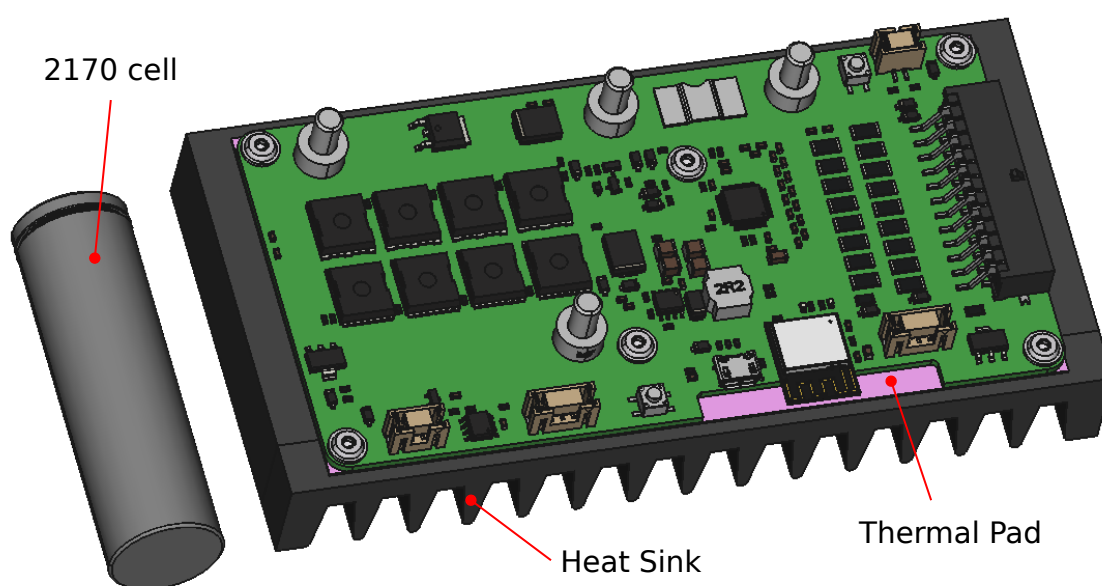


Figure 3: BMS mounted on a heat sink

Depending on the current requirements and ambient temperatures, a heat sink may be required. For good thermal contact, a thermal interface material (e.g. Henkel/Bergquist GAP PAD A2000) is required, as shown in above picture.

4.2 Connections

Below picture shows the connections of the cells, the 10k thermistors (NTC1 and NTC2) and the high power cables.

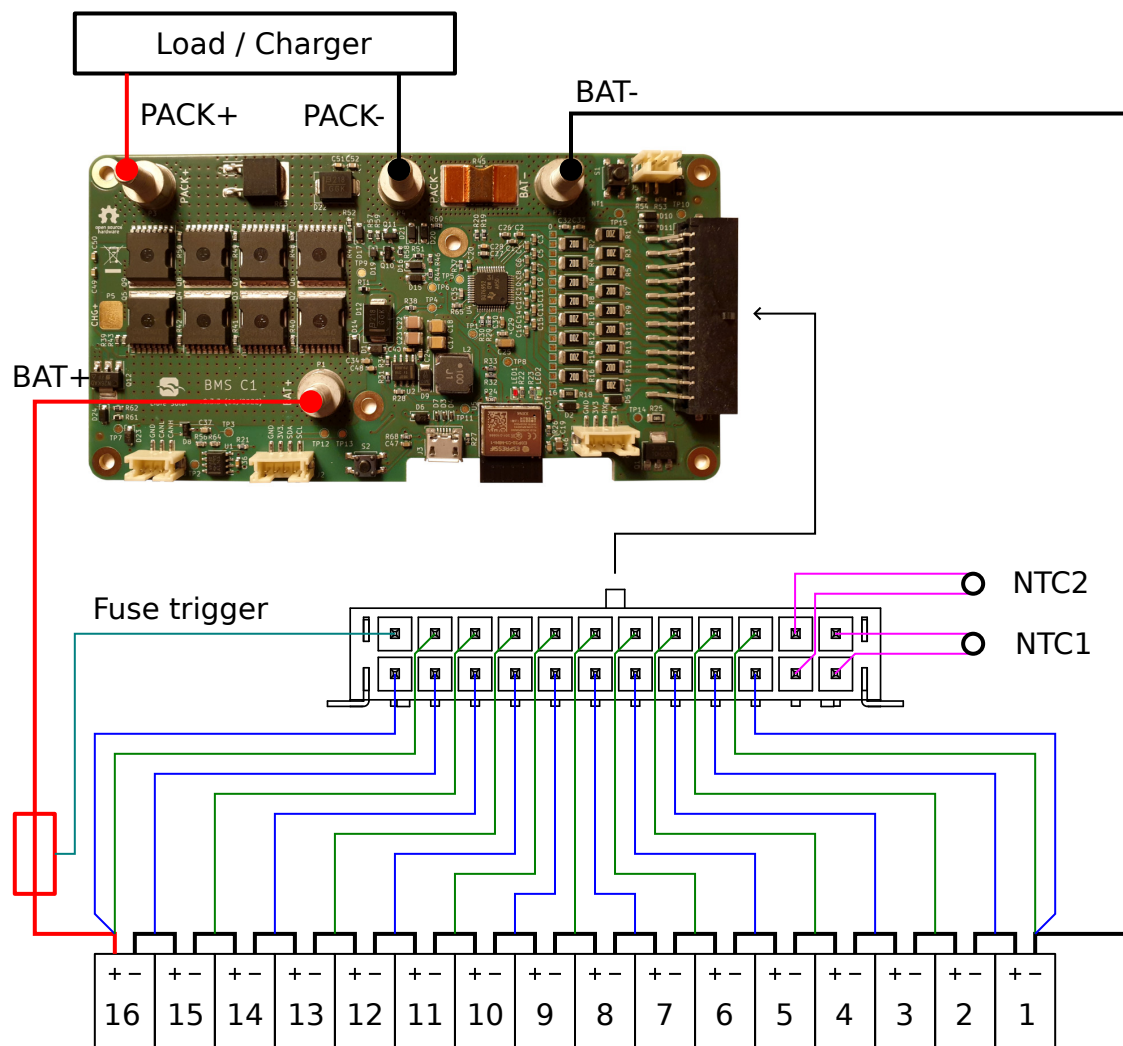


Figure 4: BMS connections

The BMS is powered through the BAT+ terminal. If only the cell connector is mounted, the power is provided through the additional BAT+ wire in the cell connector, which has to be connected to the last cell's positive terminal.

The BMS cannot be powered through the USB port only.

4.2.1 Power connections

The high power terminals have an M5 thread and allow to fit wires of up to 35 mm² cross-section.

The nuts and washers should be made from stainless steel to avoid corrosion with copper cable lugs.

The wires must be properly fixed in the housing to reduce stress on the soldered terminals on the PCB.

The fixing torque for the nuts is 2.2 Nm. Use of a torque wrench is highly recommended.

4.2.2 Signal connections

The MPC3 / Microfit connector must be equipped with properly crimped wires connected to the cells and the thermistors. Würth sells [pre-crimped wires](#) so that no crimping tool is needed (the low-force type is recommended). These wires can be cut in half and connected to an own wiring harness.

If less than 16 cells are used, the unused cell connections have to be short-circuited (either on the PCB using the pads left of the balancing resistors or in the wiring harness). See also the [BQ76952 documentation](#) for further details.

At least NTC1 has to be connected and show a valid temperature range for the BMS to allow charging/discharging.

4.2.3 Connection order

1. Connect the fully wired cell connector. (Note the two separate connections to the first cell's negative terminal)
2. Connect the BAT- terminal.
3. Connect the BAT+ terminal (with a fuse in line, as shown).
4. Connect load or charger.

4.3 Communication ports

The CAN, UART and I2C communication ports use JST PH connectors. The pinout is marked on the PCB.

The I2C is shared with the BQ76952. It must be ensured that this communication is not disturbed by another component on the I2C bus.

5 Operation

5.1 Firmware flashing

If no firmware is flashed on the board, make sure the board is powered through the cell connector. The power wires BAT+ and BAT- are optional.

The firmware is flashed through the USB port. Follow the instructions in the [Firmware repository](#).

5.2 Start-up

In order to wake up the BMS chip, short-press the ON/OFF button S1 (top-right corner).

If the button is long-pressed for at least 3 seconds, the BMS will go into low-power shutdown mode.

A custom push-button as part of the battery housing can be connected to the connector J5 next to the button.

5.3 LED indications

The BMS is equipped with two status LEDs with below indications:

Red LED:

Status	Meaning
off	Discharging finished and battery is empty
on	Discharging allowed (current below idle threshold)
blinking slowly	Discharging active (current above idle threshold)
flashing quickly	Discharging error (UV/OT/UT/OC/SC)

Green LED:

Status	Meaning
off	Charging finished and battery is full
on	Charging allowed (current below idle threshold)
blinking slowly	Charging active (current above idle threshold)

5.4.2 UART Serial

The serial interface uses a baud-rate of 115200 bps. Depending on the operating system, you can use different tools to communicate with the serial interface manually.

For Linux [CuteCom](#) is recommended, as it stores a history of previous commands.

The [Serial2Websocket Python script](#) can be used as a basis for own scripts to use the monitoring data.

5.4.3 BLE

The generic [ThingSet app](#) can be used to connect to the BMS via Bluetooth LE.

For own developments see the BLE transport layer specification on the ThingSet website and consider the implementation of the device side in the [ThingSet Zephyr SDK](#).

5.5 Configuration

The ThingSet protocol itself allows to discover available data items for configuration, so this manual will only use some examples for demonstration purposes.

5.5.1 Read measurements and battery status

Use the following command to get the current state of the battery, including all current, temperature and voltage measurements:

```
?Meas
```

5.5.2 Configure battery type

The configuration for a particular cell type and battery size can be preset with suitable default values using the two executable data items `xPresetNMC` for NMC cells and `xPresetLFP` for LFP cells. The functions expect a parameter defining the nominal capacity of the battery in Ah.

For an LFP battery with 45 Ah, send the following command to the BMS:

```
!Conf/xPresetLFP [45]
```

The expected response if the parameters were successfully set:

```
:84 0
```

5.5.3 Adjust thresholds

The current configuration can be determined with the following command:

```
?Conf
```

Individual parameters can be adjusted with a command as shown below (using the overvoltage threshold as an example):

```
=Conf {"sCellOvervoltage_V": 3.8}
```

6 Datasheet

Feature	Value	Comment
Battery		
Nominal voltage range	12 V to 48 V	
Maximum voltage	70 V	
Maximum current	70 A - 100 A heat	Depending on ambient conditions and sink
Self consumption	< 20 mA	Exact value t.b.d.
Shutdown current	< 1 mA	Exact value t.b.d.
Cell types	LFP, NMC and others	Customizable through firmware
Interfaces		
CAN 2.0		
RS-485 (connector shared with CAN)		
USB CDC-ACM		
UART serial		
I2C		
Bluetooth		
Protection		
Over-/undervoltage		
Overcurrent / Short circuit		
Over-/undertemperature		
Environmental conditions		
Operating ambient temperature	-10 °C to +50 °C	
Storage temperature	-20 °C to +60 °C	
Humidity	<95%, non-condensing	
Mechanical design		
Screw terminals	M5, torque: 2.2 Nm	

Feature	Value	Comment
Weight	t.b.d.	
Dimensions	70 mm x 135 mm	